

**Software - Release Notes**  
**Runner-4 / Runner-8**  
**New Software Version 9.08**

**1. P200E Option 14: RSSI Present**

At this mode the control Panel present the RSSI of assigned wireless detectors and remotes.

Supported by: Receiver ver 3.7 and Keypad ver 2.10.

**2. P73E 1-8E Option 7: Turn off Backlight after 10Sec and LEDs indication at Arm mode**

**3. At Disarm Mode the activating the System Tamper or Zone Tamper will not activate Output 1&2.**

**4. P25E 13E option 7: Enable Keypad Tamper.**

Keypad Tamper is disabling by Default.

**5. P122E Option 3: Not an Exit Delay Zone.**

Instant Zone cause an alarm when trigger during exit delay.

**6. P25E 3E 0-255: Dialer Report Delay**

The dialer report is delayed if during Exit delay an Instant Zone activated.

**7. P36E 5E: Disable Outputs 1&2 during dial Delay.**

**8. Exit from Walk Test Mode will stay in Programming mode.**

**9. While learning wireless devices a messages "Code In Use" and "Not Found" accordingly.**

**10. From the main display Pressing Enter will present the open zones, pressing Enter again will present the open zones by name.**

**11. Listen-In time extended to 3min.**

**12. Beeps from Keypad turn off during the Listen -In.**

**13. Report in Stay mode also at Voice Mode.**

## 14. Default Changes:

### P4E 1-100E : USER CODE ACCESS OPTIONS

User 1-20 = 1, 3, 4

User 21,26,31,36 = 1

User 22,27,32,37 = 3, 4

User 23,28,33,38 = 2

User 24,29,34,39 = (Delay Panic – see P8E)

User 25,30,35,40 = None (Not In Use)

User 41-100 = 1, 3, 4

1. Code can Arm Area
2. Code can arm Stay Mode
3. Code can Disarm Area
4. Code can disarm Stay Mode

### P8E 21-100E: RADIO USER PRIVILEGES

User 21,26,31,36 = None

User 22,27,32,37 = 1

User 23,28,33,38 = None

User 24,29,34,39 = 3

User 25,30,35,40 = None

User 41-100 = 1

1. Pendant Can Disarm at All Times
2. Pendant Causes Immediate Panic
3. Pendant Causes Delayed Panic ( 1.5 Sec)

### P25 10E 2, 6 –ON

Panel Tamper is Short Circuit.

2. Direct access to program mode for the installer code
6. Send output information to keypad BUS.

### P182E 1-8E

Telephone No 1, 2 = 1

Telephone No 3-8 = 2

1. Contact ID
2. Domestic Dial

**Software - Release Notes**  
**Runner-4 / Runner-8**  
**New Software Version 9.08**

**1. P200E Option 14: RSSI Present**

At this mode the control Panel present the RSSI of assigned wireless detectors and remotes.

Supported by: Receiver ver 3.7 and Keypad ver 2.10.

**2. P73E 1-8E Option 7: Turn off Backlight after 10Sec and LEDs indication at Arm mode**

**3. At Disarm Mode the activating the System Tamper or Zone Tamper will not activate Output 1&2.**

**4. P25E 13E option 7: Enable Keypad Tamper.**

Keypad Tamper is disabling by Default.

**5. P122E Option 3: Not an Exit Delay Zone.**

Instant Zone cause an alarm when trigger during exit delay.

**6. P25E 3E 0-255: Dialer Report Delay**

The dialer report is delayed if during Exit delay an Instant Zone activated.

**7. P36E 5E: Disable Outputs 1&2 during dial Delay.**

**8. Exit from Walk Test Mode will stay in Programming mode.**

**9. While learning wireless devices a messages "Code In Use" and "Not Found" accordingly.**

**10. From the main display Pressing Enter will present the open zones, pressing Enter again will present the open zones by name.**

**11. Listen-In time extended to 3min.**

**12. Beeps from Keypad turn off during the Listen -In.**

**13. Report in Stay mode also at Voice Mode.**

## 14. Default Changes:

### P4E 1-100E : USER CODE ACCESS OPTIONS

User 1-20 = 1, 3, 4

User 21,26,31,36 = 1

User 22,27,32,37 = 3,4

User 23,28,33,38 = 2

User 24,29,34,39 = (Delay Panic – see P8E)

User 25,30,35,40 = None (Not In Use)

User 41-100 = 1, 3, 4

1. Code can Arm Area
2. Code can arm Stay Mode
3. Code can Disarm Area
4. Code can disarm Stay Mode

### P8E 21-100E: RADIO USER PRIVILEGES

User 21,26,31,36 = None

User 22,27,32,37 = 1

User 23,28,33,38 = None

User 24,29,34,39 = 3

User 25,30,35,40 = None

User 41-100 = 1

1. Pendant Can Disarm at All Times
2. Pendant Causes Immediate Panic
3. Pendant Causes Delayed Panic (1.5 Sec)

### P25 10E 2, 6 –ON

Panel Tamper is Short Circuit.

2. Direct access to program mode for the installer code
6. Send output information to keypad BUS.

### P182E 1-8E

Telephone No 1, 2 = 1

Telephone No 3-8 = 2

1. Contact ID
2. Domestic Dial